



Exit button with dual function of infrared sensing and push

Model: EL.ISK-845

Drawing:

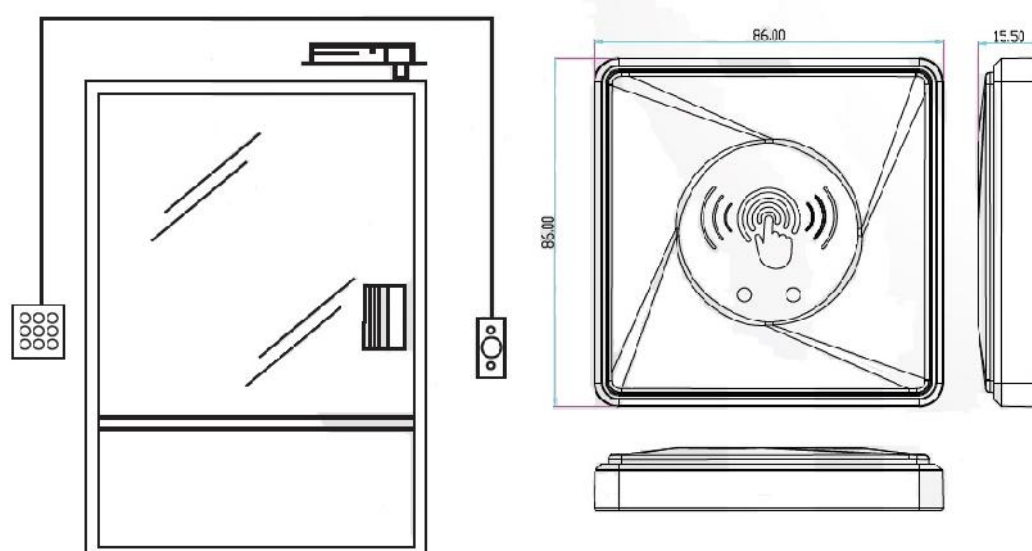

Installation:

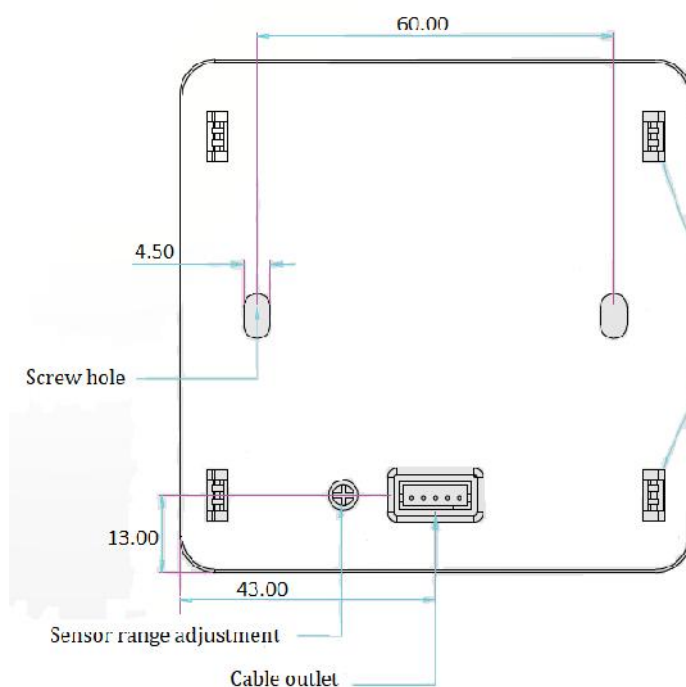

Installation steps:

- 1. Use a flat-blade screwdriver to pry the buckles of both sides to separate the faceplate and back box then remove the faceplate.**
- 2. Mark the screw holes and the cable outlet position, fix the back box, pay attention to the direction of the buckles and do not install it upside down.**

Wiring Diagram

Wiring of infrared sensing



Clockwise rotation induction

distance becomes shorter

Anticlockwise rotation induction d

istance becomes longer

Induction distance adjustable

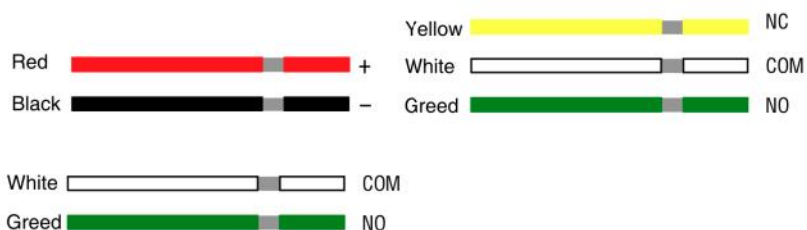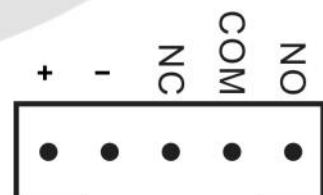

Push to exit wiring

